

BASIC MAINTENANCE


- 1** Remove the front stainless steel panels to reveal the internal machine parts.



- 2** Locate the electrical box and turn the red dial to **OFF** to turn the unit off.




- 3** Locate the water supply tap underneath the water pressure gauge and turn it to the horizontal **OFF** position.

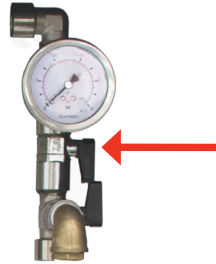


- 4** Locate the electrical box and turn the red dial to **ON**. Check the water pressure gauge to ensure that it decrease to 0. Turn the red dial to **OFF** again.




- 5** Open the maintenance panel: unscrew the 10 black knobs counterclockwise and remove the panel.

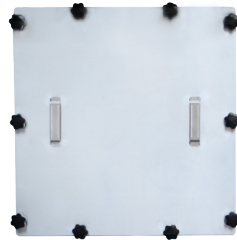


- 6** Open the water drain gate by turning the red lever to a horizontal position. The water will begin to drain from the unit. Allow the tank to empty.

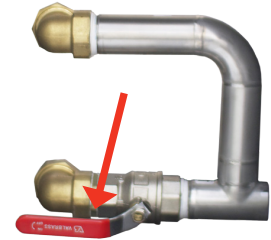

- 7** Remove all filter components. Wash them in the restaurant dishwasher, ensuring that all soot particulate is removed from the stainless steel surface.

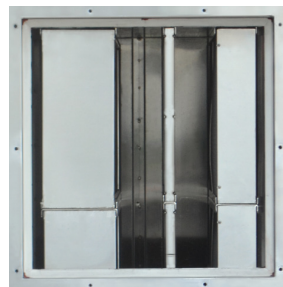


- 8** Locate the yellow hose and place it inside the unit interior. Open the hose tap located at the base of the hose. Wash all visible debris from the tank walls and interior. Close the hose tap and return the hose to its storage position.

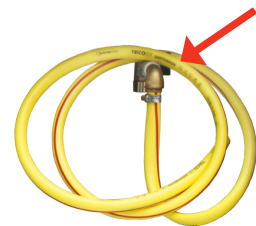

- 9** Locate the water filter: if it appears to be dirty, remove the housing and clean it thoroughly in a sink before replacement. If it is clean leave it connected.



- 10** Close the water drain gate by turning the red lever to the vertical position.

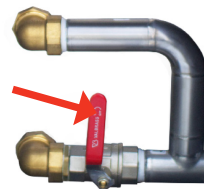

- 11** Locate the water supply tap and turn it so that the pressure gauge reads 1 bar



- 12** Replace all filters in the correct order; with the black arrows pointing in the direction of the airflow. Replace and secure the maintenance panel using the black knobs.



- 13** Locate the electrical box and turn the red dial to **ON**. The tank will begin to fill with water. The pump will automatically restart once the water level is sufficient. The unit is operational.



Important: Every three months add a detergent to the tank and scrub the tank walls with a brush to fully remove all collected soot particles.

MANTENIMIENTO BASICO

MAXI GRILL


- 1** Retire los paneles frontales de acero inoxidable para revelar las partes internas de la máquina.



- 2** Localice la caja eléctrica y gire el indicador rojo a OFF para apagar la unidad.



- 3** Localice el suministro de agua que se encuentra debajo del indicador de presión de agua y gírelo hacia la posición horizontal que indica OFF.

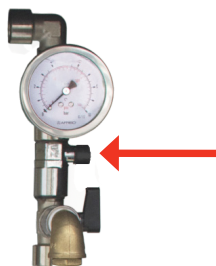


- 4** Localice la caja eléctrica y gire el indicador rojo a ON. Revise el indicador para asegurarse de que disminuyó a cero. Gire el indicador rojo a OFF de nuevo.



- 5** Abra la cubierta de mantenimiento. Desenrosque las cuatro perillas negras hacia la izquierda y retire la cubierta.




- 6** Para abrir el desagüe, gire la palanca roja en posición horizontal. El agua empezará a vaciarse de la unidad. Permita que el tanque se vacíe.

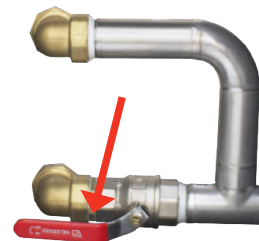

- 7** Retire todos los componentes del filtro. Lávelos en el lavaplatos del restaurante, asegurándose que todas las partículas de hollín se han desprendido de la superficie de acero inoxidable.




- 8** Localice el filtro de agua: si parece estar sucio o contiene escombros, retire su armazón y límpielo a fondo en el fregadero antes de reemplazarlo. Si está limpio, manténgalo conectado.

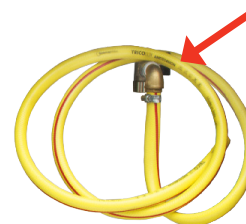

- 9** Localice el filtro de agua: si parece estar sucio o contiene escombros, retire su armazón y límpielo a fondo en el fregadero antes de reemplazarlo. Si está limpio, manténgalo conectado.



- 10** Cierre el suministro de agua al girar la palanca roja en posición vertical.

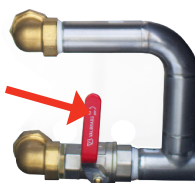

- 11** Localice la llave del suministro de agua y enciéndela hasta que el indicador lee 1 bar de presión.



- 12** Reemplace todos los filtros en el orden correcto; con las flechas negras que indican la dirección del flujo del aire. Reemplace y refuerce el panel de mantenimiento utilizando los botones negros.



- 13** Localice la caja eléctrica y gire el indicador rojo a ON. El tanque empezará a llenarse de agua. La bomba se reiniciará automáticamente una vez que el nivel del agua sea suficientemente alto. La unidad está en operación.



Importante: Cada tres meses coloque detergente en el tanque y lave las llaves con un cepillo para retirar todas las partículas de hollín que han ingresado al equipo.